


OUTSIDE OF PORCH

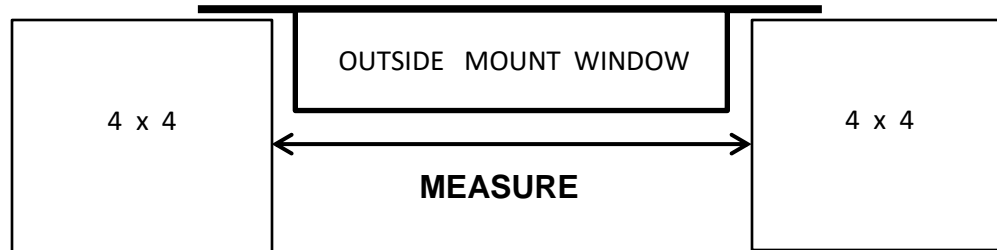

Measure **EACH** window opening width and height in 2 or 3 places. Write down the smallest measurement.

Check the **OUTSIDE** of the porch to make sure you have **AT LEAST** a 1 inch flat area all around the window. If placing one window right next to another we suggest using a 4 X 4 or two 2 X 4's. Be sure to look up at the top of the window opening to make sure you have 1 inch **OR MORE** area to attach the top flange to. Look at the bottom of the opening and make sure you have 1 inch **OR MORE** to attach the bottom flange to. **We do not want a sloped sill.**

The windows will come numbered the same way we send them in. Remember where window #1 is.

PGT will deduct 1/4 inch off the measurements sent to them. We need to talk about the deduction. We want a little space between the jamb and the 4 x 4.

We will order all the windows the shortest height so the horizontal bars line up. You may have to fill in with wood if the openings vary a lot in height.

You will need screws and caulking.

TRY NOT TO MAKE OPENINGS WIDER THAN 48 INCHES